




Dell XPS 18 Internal Cover

Prerequisite

Written By: Austin Weir

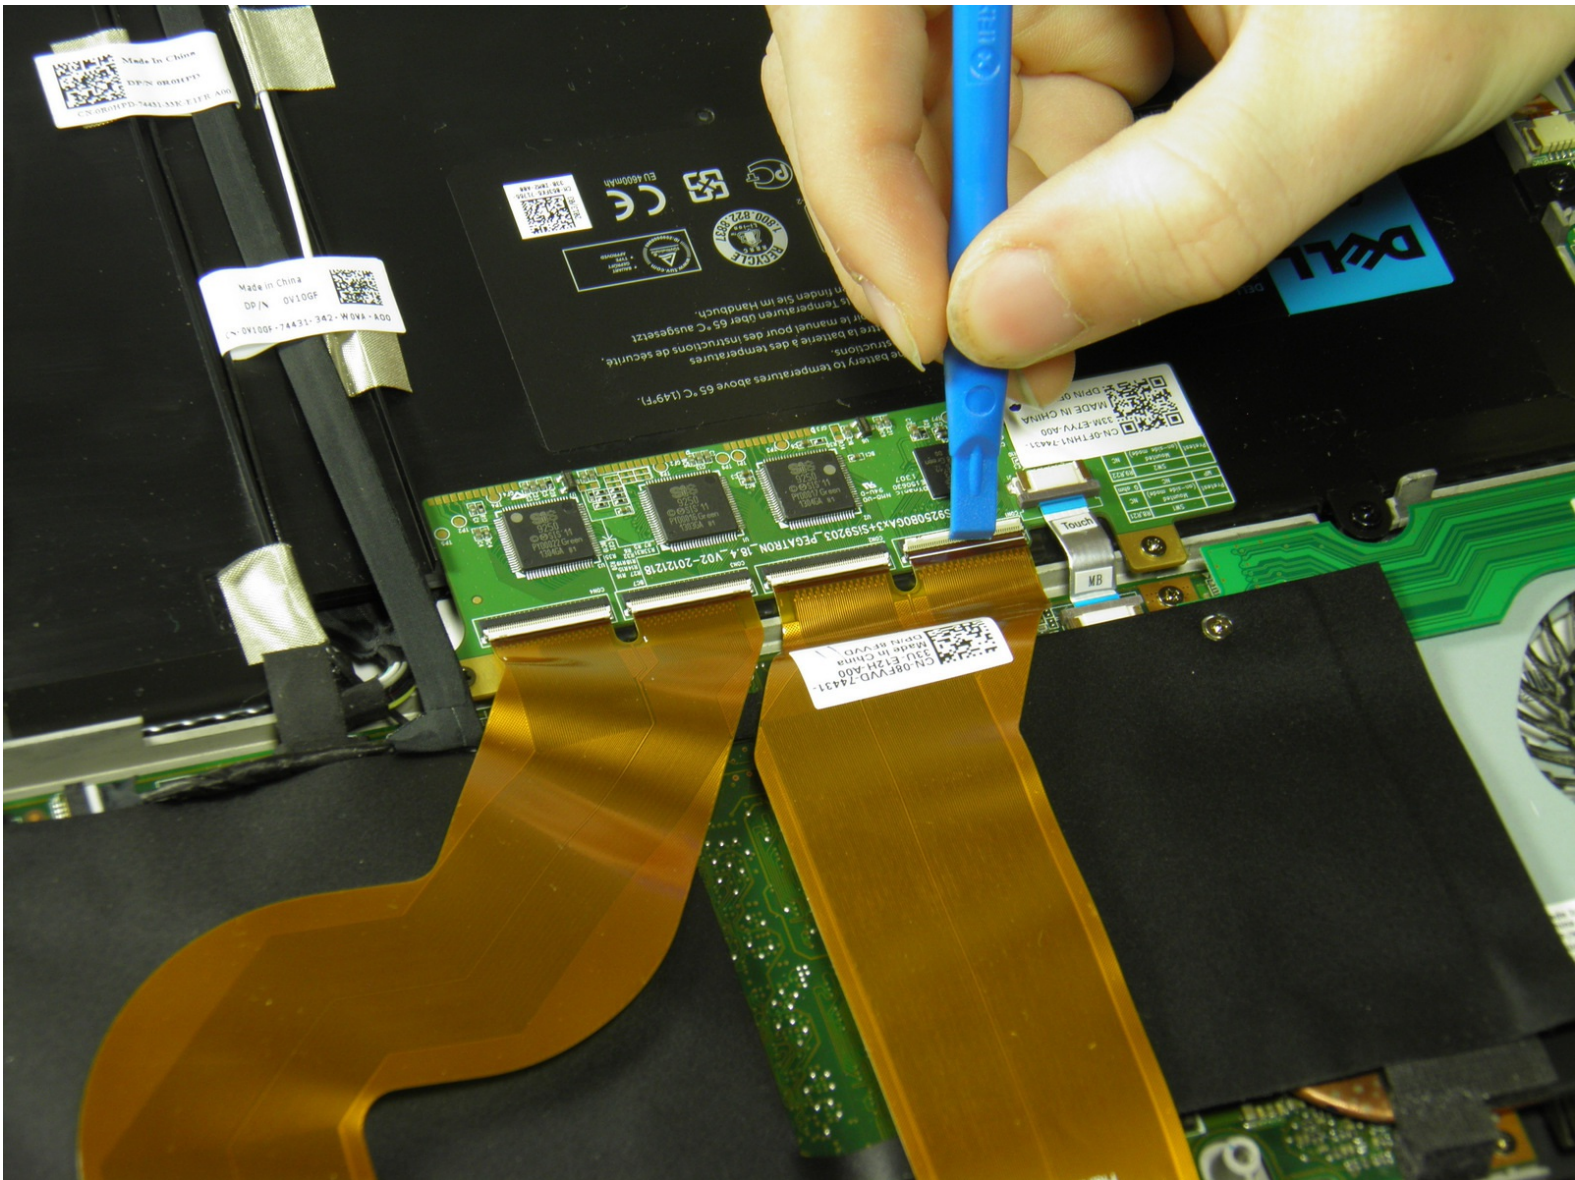

INTRODUCTION

This guide is used as a prerequisite for replacing internal parts in the Dell XPS 18

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T9 Torx Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Turn the device on its screen.
- Remove the ten 4mm screws using a T8 Torx screwdriver.

Step 2




- Gently flip out support feet located near the bottom of device.

Step 3





- Gently lift the back cover off the device. The back cover should come off easily.

Step 4 — Internal Cover

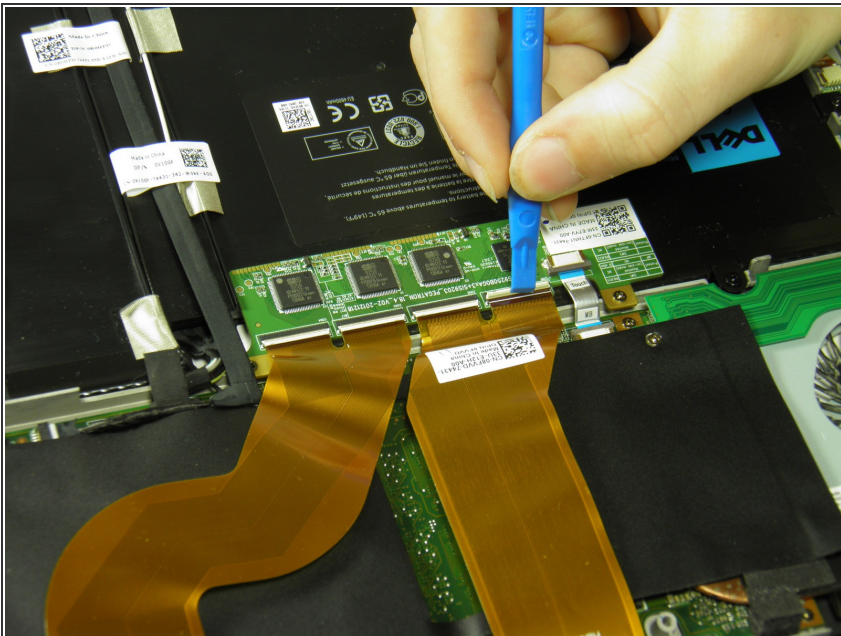



- Use the opening tool's angled edge to lift the clasps securing the screen and motherboard cables.

Step 5

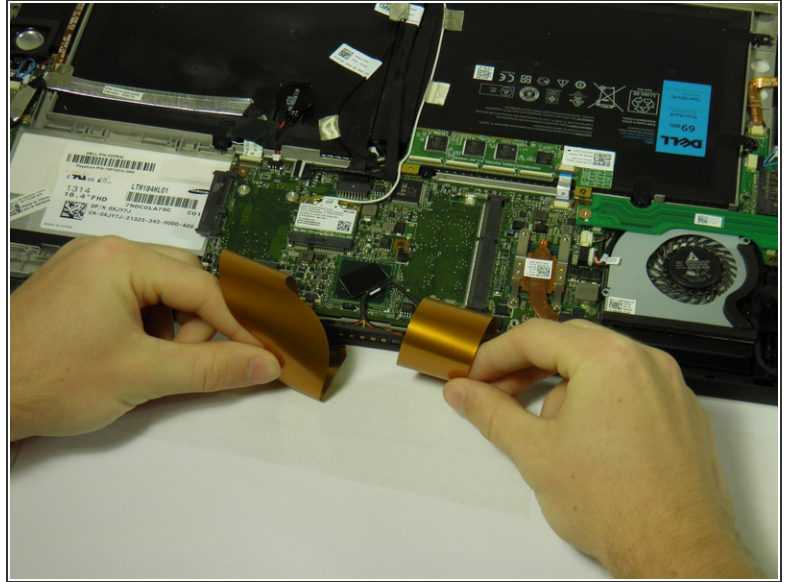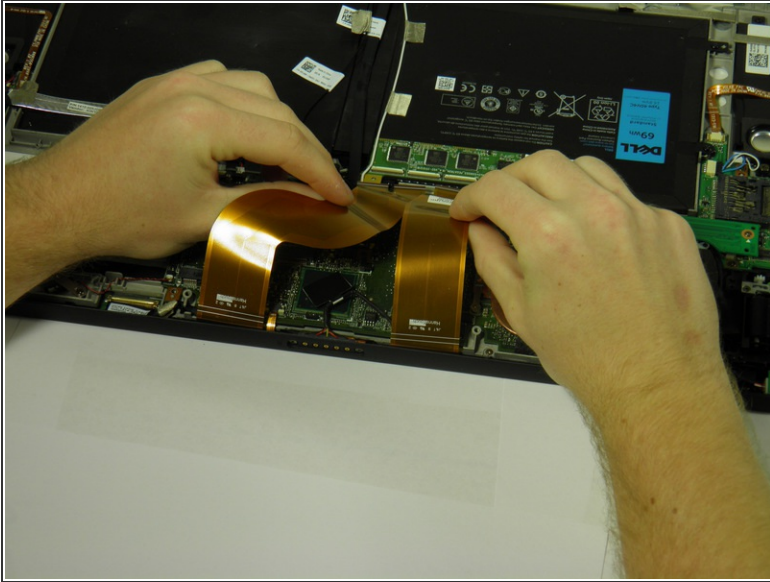

- Disconnect the screen and copper colored motherboard cables and tuck them under the device to prevent future hassle.

Step 6

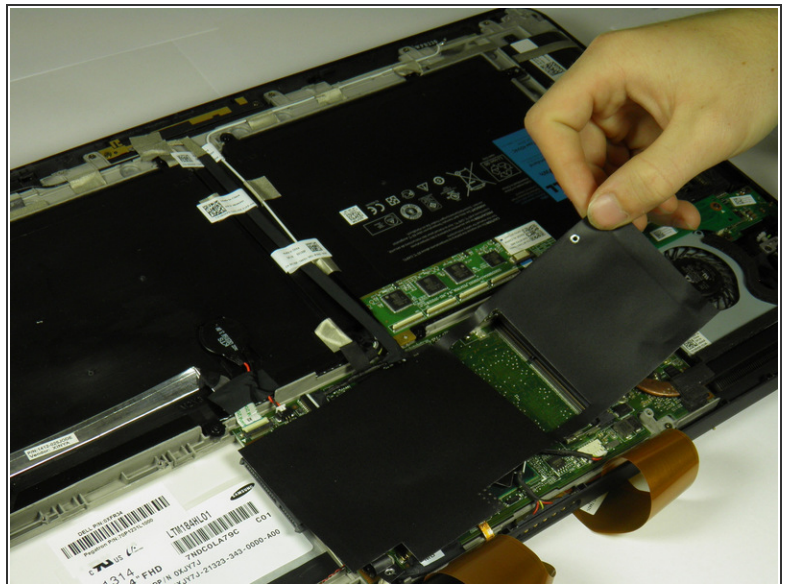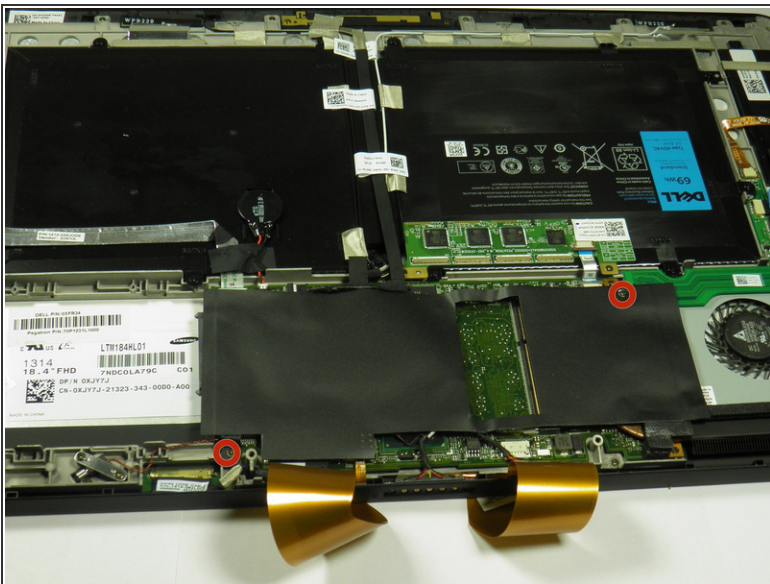

- Remove the two black 3mm screws from the internal cover with a Phillips 00 screwdriver.
- Remove the internal cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 04:31:48 AM.